

SFLM ONLINE REGISTRATION AND LICENSE FILE INSTALLATION

IMPORTANT: WHEN YOU INSTALL THE SFLM SOFTWARE, PLEASE REGISTER ONLY THE MACHINE THAT IS THE LICENSE SERVER.

1. A web browser will automatically appear when installation is completed. If not, click here: <http://127.0.0.1:3162/Admin/Ssmid> or <http://localhost:3162/Admin/Ssmid> below will appear.


The screenshot shows the SFLM License Server Administrator Login page. At the top left is the SFLM License Server logo. At the top right is the "Administrator Login" button. Below the logo is a navigation menu with links: Home, Admin, Install new license(s), Change Password, Register License Server, Setup Redundant Servers, Customize Logging, Synchronize Server Time, Send Test Log Message, Reports, and Support Utilities. The main content area is titled "Register License Server" and contains a text input field for the "SFLM Administrator password:" followed by a "Login" button. A "Help" link is in the top right corner. At the bottom, there is a status bar with the following information: SFLM server: AMLCD:3162, Machine IDs: 1HASPb814bc75 AMLCD-7d20205-25401f76, Redundant Groups: License file: C:\2003\Silvaco/etc/license;C:\var\opt\sflm/licenses, and Version: sflm_server 6.0.12 (Sun Jan 11 13:35:12 2004).

2. It will prompt you for a Password. Enter the Administrator password that was typed-in. Then click on “Login”. The following appears:

The screenshot shows the SFLM License Server Register License Server page. At the top left is the SFLM License Server logo. At the top right is the "Logout" button. Below the logo is a navigation menu with links: Home, Admin, Install new license(s), Change Password, Register License Server, Setup Redundant Servers, Customize Logging, Synchronize Server Time, Send Test Log Message, Reports, and Support Utilities. The main content area is titled "Register License Server" and contains the following text: "For any of it to work, you must register this server software. There are two ways of doing this:" followed by two options: "Register online (recommended)" and "Register offline". The "Register online" option includes a "Register Online" button. The "Register offline" option includes a "Register Offline" button. A "Help" link is in the top right corner. At the bottom, there is a status bar with the following information: SFLM server: AMLCD:3162, Machine IDs: 1HASPb814bc75 AMLCD-7d20205-25401f76, Redundant Groups: License file: C:\2003\Silvaco/etc/license;C:\var\opt\sflm/licenses, and Version: sflm_server 6.0.12 (Sun Jan 11 13:35:12 2004).


3. Click on “**Register Online**” if you have web access (i.e. your PC is connected to internet). Then, go to step 4. **If you DO NOT have web access, you need to perform an “Offline Registration”.** Please refer to attached file “SFLM Offline.doc” for the Offline Registration procedure. **DO NOT USE THE “REGISTER OFFLINE” BUTTON IN THE WEB BROWSER.**

4. Key in your **Email Address, Company, Telephone** and **Contact Name**. Select “**Silvaco**” as the “Software vendor”. Then, click “**Next**”.

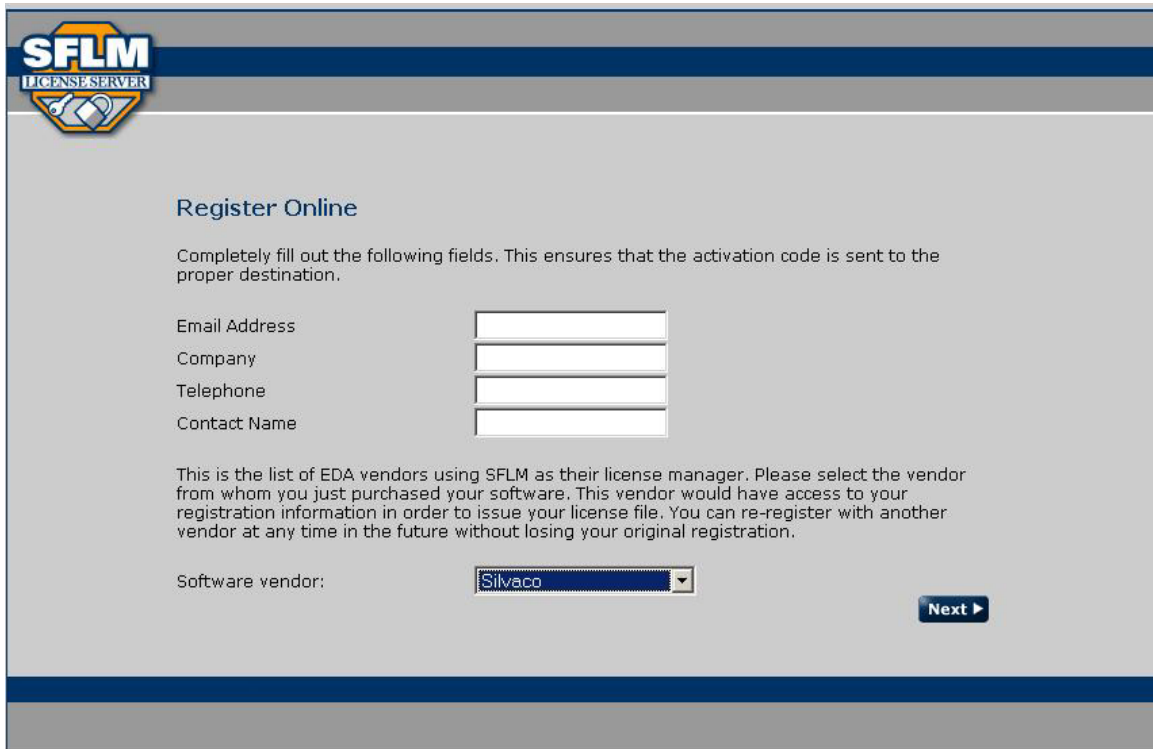

The screenshot shows the 'Register Online' page of the SFLM License Server. At the top left is the SFLM License Server logo. The main heading is 'Register Online'. Below it, a paragraph states: 'Completely fill out the following fields. This ensures that the activation code is sent to the proper destination.' There are four input fields: 'Email Address', 'Company', 'Telephone', and 'Contact Name'. Below these fields is a paragraph: 'This is the list of EDA vendors using SFLM as their license manager. Please select the vendor from whom you just purchased your software. This vendor would have access to your registration information in order to issue your license file. You can re-register with another vendor at any time in the future without losing your original registration.' Below this is a 'Software vendor:' label and a dropdown menu with 'Silvaco' selected. A 'Next >' button is located at the bottom right.

5. The following will appear. Please write down the “Code Name”. Click **OK** and this finishes the Online Registration stage.

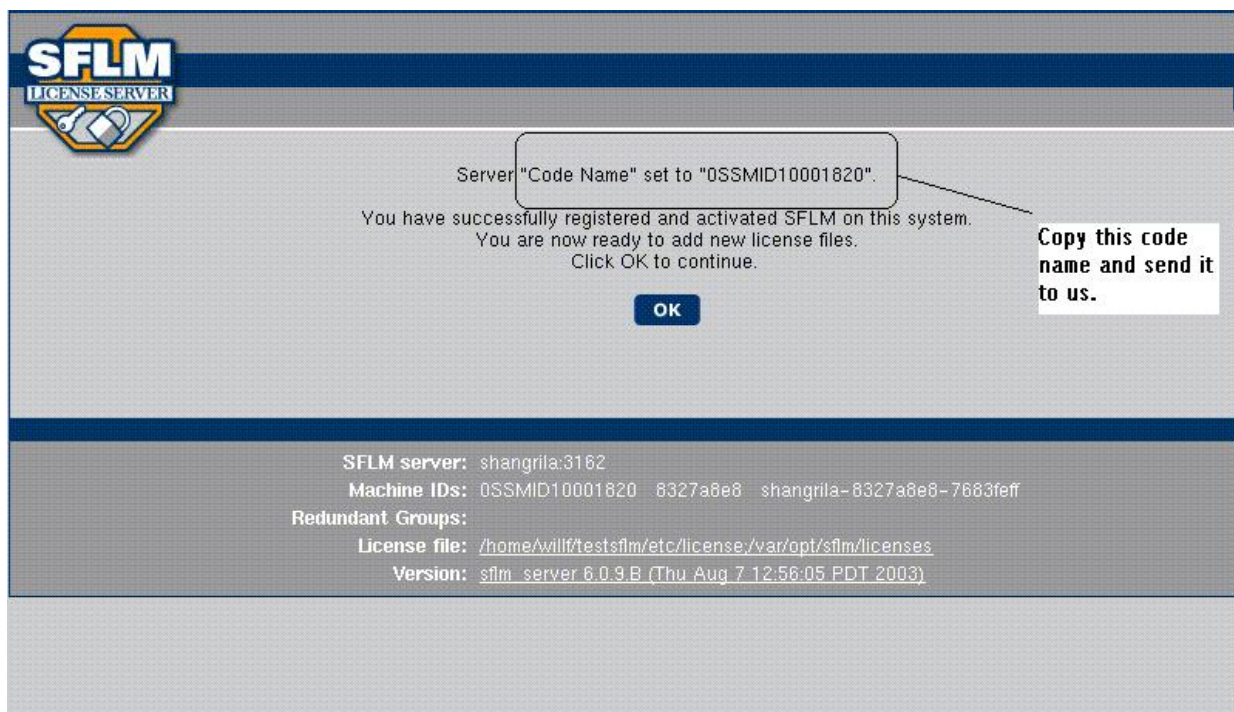

The screenshot shows the completion screen of the SFLM License Server registration. At the top left is the SFLM License Server logo. The main text reads: 'Server "Code Name" set to "0SSMID10001820". You have successfully registered and activated SFLM on this system. You are now ready to add new license files. Click OK to continue.' A callout box points to the 'Code Name' with the text: 'Copy this code name and send it to us.' Below the main text is an 'OK' button. At the bottom, there is a summary of the registration information: 'SFLM server: shangrila:3182', 'Machine IDs: 0SSMID10001820 8327a8e8 shangrila-8327a8e8-7683feff', 'Redundant Groups:', 'License file: /home/willf/testsfilm/etc/license/var/opt/sfilm/licenses', and 'Version: sfilm_server 6.0.9.B (Thu Aug 7 12:58:05 PDT 2003)'.


6. Email us the “Code Name” and your registered information:

- a. **Email Address;**
- b. **Company Name and Company Address;**
- c. **Telephone;**
- d. **Contact Name.**

7. Once you have completed your online registration, Silvaco HQ will generate the requested license file in 1 or 2 working days. We will then send you an email to notify you of the new license files.

8. Once we have notified you that your license file is ready, bring up a web browser and type in: <http://127.0.0.1:3162> or <http://localhost:3162>.


9. Click on “Install new license(s)” and the following appears:

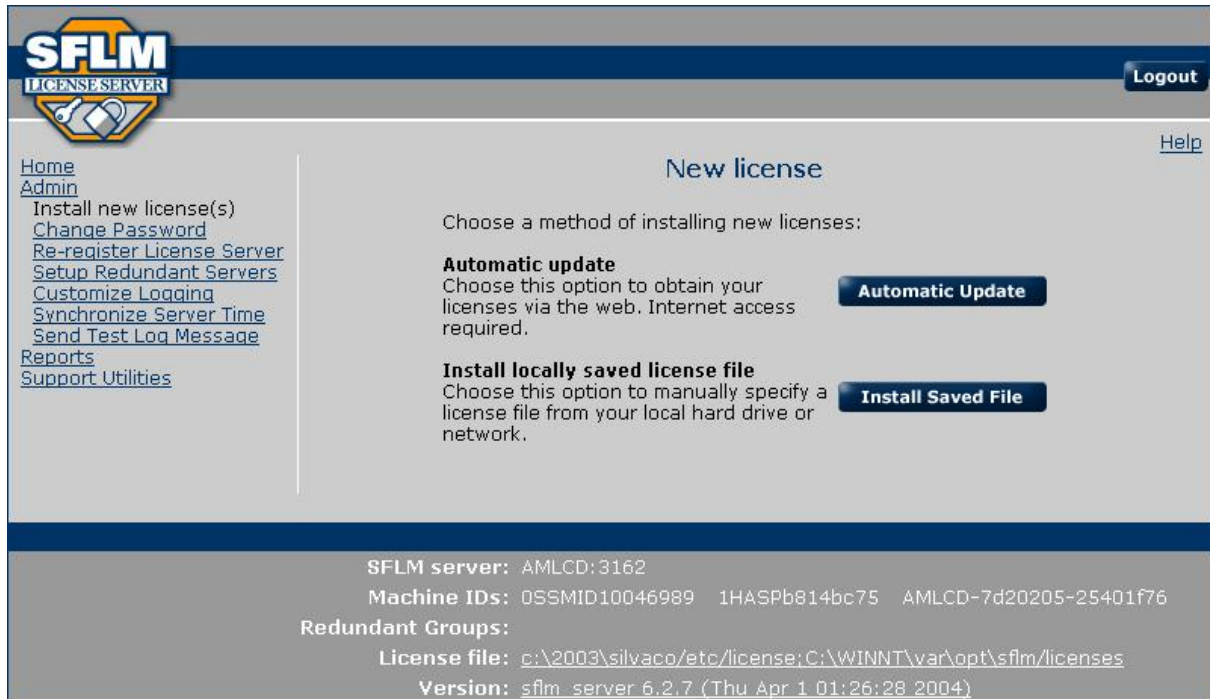

The screenshot shows the SFLM License Server web interface. The page title is "New license". On the left, there is a navigation menu with links: Home, Admin, Install new license(s), Change Password, Re-register License Server, Setup Redundant Servers, Customize Logging, Synchronize Server Time, Send Test Log Message, Reports, and Support Utilities. The main content area is titled "Choose a method of installing new licenses:". There are two options: "Automatic update" (Choose this option to obtain your licenses via the web. Internet access required.) with a button labeled "Automatic Update", and "Install locally saved license file" (Choose this option to manually specify a license file from your local hard drive or network.) with a button labeled "Install Saved File". At the bottom, there is a status bar with the following information: SFLM server: AMLCD:3162, Machine IDs: OSSMID10046989 1HASPb814bc75 AMLCD-7d20205-25401f76, Redundant Groups: License file: c:\2003\silvaco\etc\license;c:\WINNT\var\opt\sflm\licenses, Version: sflm_server 6.2.7 (Thu Apr 1 01:26:28 2004).

10. Click on “Automatic Update” and below will appear.

11. Click “Next” and your license shall be activated.

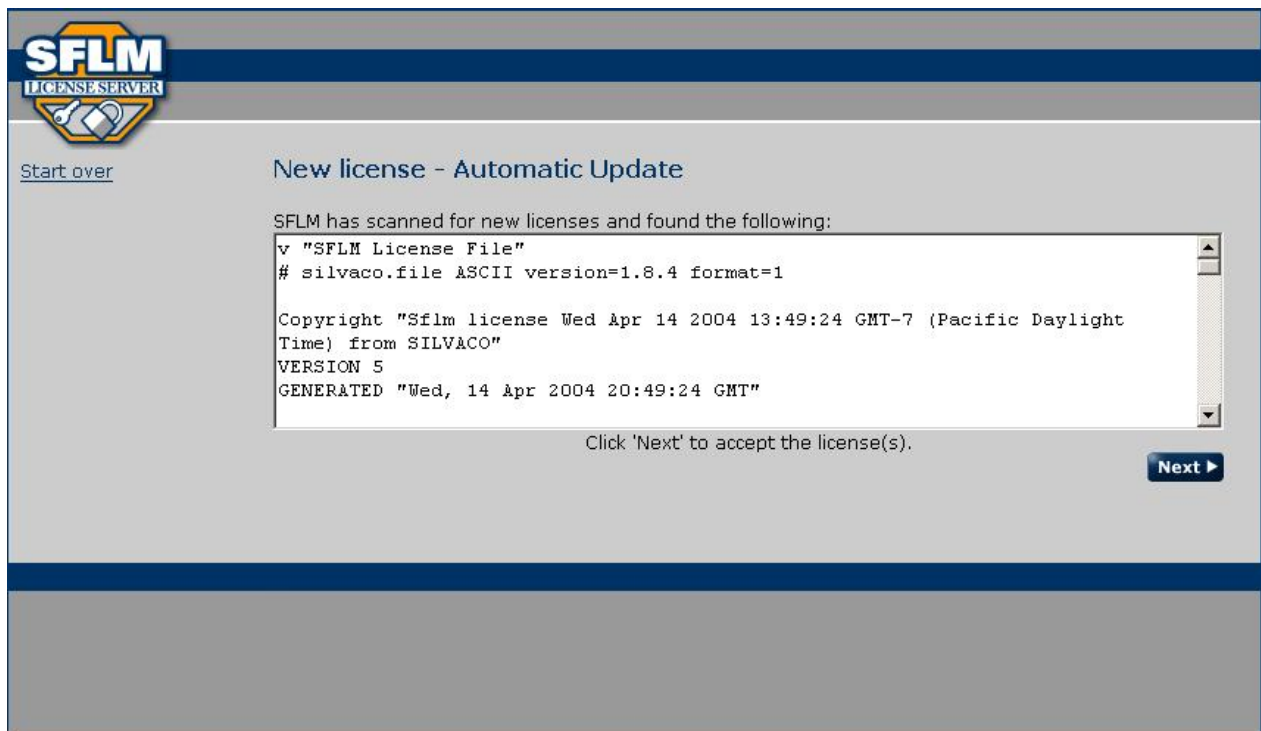

The screenshot shows the SFLM License Server web interface after clicking "Automatic Update". The page title is "New license - Automatic Update". There is a "Start over" link on the left. The main content area displays the following text: "SFLM has scanned for new licenses and found the following:" followed by a text box containing: v "SFLM License File", # silvaco.file ASCII version=1.8.4 format=1, Copyright "Sflm license Wed Apr 14 2004 13:49:24 GMT-7 (Pacific Daylight Time) from SILVACO", VERSION 5, GENERATED "Wed, 14 Apr 2004 20:49:24 GMT". Below the text box, it says "Click 'Next' to accept the license(s)." and there is a "Next" button with a right-pointing arrow.